




An example of the *Diversion Booming Tactic*. Actual deployment should be adjusted for local conditions.

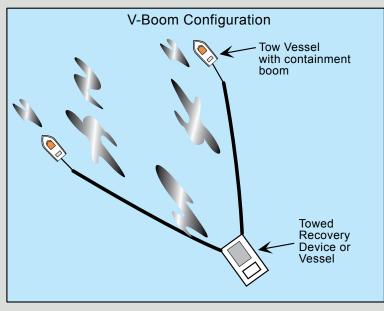

An example of the *Free-oil Recovery Tactic*.
Actual deployment should be adjusted for local conditions.

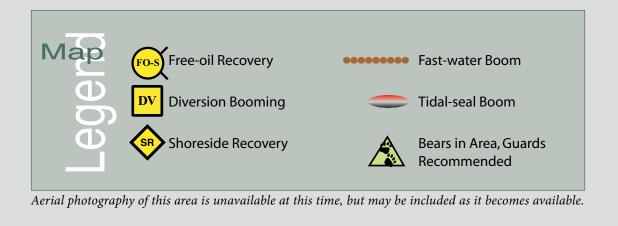

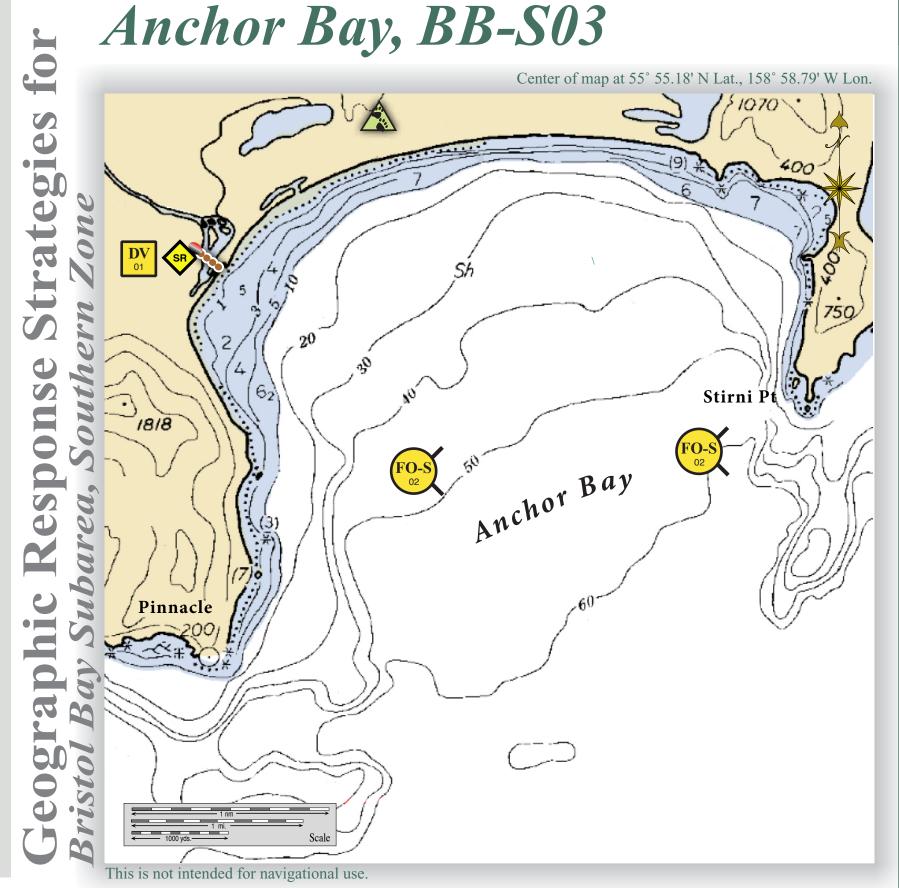

ID	Location and Description	Response Strategy	Implementation	Response Resources	Staging Area	Site Access	Resources Protected (months)	Special Considerations
S-03-01 DV	Anchor Bay Lat. 55° 55.59'N Lon. 159°00.39'W	Divert and Collect Divert oil to shore side collection location on the shoreline of the identified creek in the Anchor Bay.	Deploy anchors and boom with skiffs (class 6). Place fast-water boom at each location at the proper angle to divert incoming oil to the collection sites. Complete the array with 60 ft. of tidal seal boom on the shore that will be used as a collection site. Set up shore-side recovery and tend throughout the tide.	Deployment Equipment 400 ft. fast-water boom 60 ft. tidal seal boom 2 ea. anchor systems 4 ea. anchor stakes 1 ea. shore-side recovery systems Vessels 1 ea. class 3 1 ea. class 6 Personnel/Shift 5 ea. vessel crew/general techs 2 ea. response techs Tending Vessels 1 ea. class 3 1 ea. class 3 1 ea. class 6 Personnel/Shift 4 ea. vessel crew/general techs 1 ea. skilled tech	Perryville	Via marine waters Chart 16556	Fish- intertidal spawning-salmon (June-Sept.) Birds-waterfowl, seabird and shorebird concentration Marine mammals- seals, sea otters Habitat- exposed tidal flats, peat shoreline, marsh, kelp beds Human use-subsistence, commercial fishing	Vessel master should have local knowledge. Title 41 permitting required from ADNR. THREATENED OR ENDANGERED SPECIES/HABITAT POSSIBLE. Discuss with DOI prior to on-site operations. Take precautions to protect the shoreline as outlined in tha Alaska STAR Manual. A large population of bears are in this area. Bear guard required. Surveyed: not yet Tested: not yet
S-03-02 FO-S	Anchor Bay Nearshore waters in the general area of: Lat. 55° 55.18'N Lon. 159°58.79'W	Free-oil Recovery Maximize free-oil recovery in the offshore & nearshore environment of Anchor Bay depending on spill location and trajectory.	Deploy free-oil recovery strike teams upwind and up current of the Anchor Bay. Use aerial surveillance to locate incoming slicks.	Deploy multiple free-oil recovery strike teams as required to maximize interception of oil before it impacts sensitive areas.	Perryville	Via marine waters Chart 16556	Same as S-03-01	Vessel master should have local knowledge. Use extreme caution, shallow waters with shifting channels and bars.